Pilot Lighting Instructions

Locate gas supply valve (typically behind louvers, below glass opening - may be red or blue).

Open valve by pivoting handle to be parallel to gas line.

Locate pilot assembly with spark ignitor (located behind and below logs in the firebox - typically in the bottom center).

Then locate red or black ignitor button.* Push ignitor to verify spark at pilot area.

Locate the black or green valve control knob (knob with the words "ON", "OFF" and "PILOT" on it).
Push in and rotate counter-clockwise until the word "pilot" is in the 6 o'clock position.**

While pressing and holding in the valve knob (in "PILOT" position - it should press in about 1/4"), press the red piezo button repeatedly (once per second) until the pilot ignites. If the pilot does not light, wait 5 minutes and try again. Once the pilot is lit, continue to hold the valve knob in for 30 seconds, then slowly release.

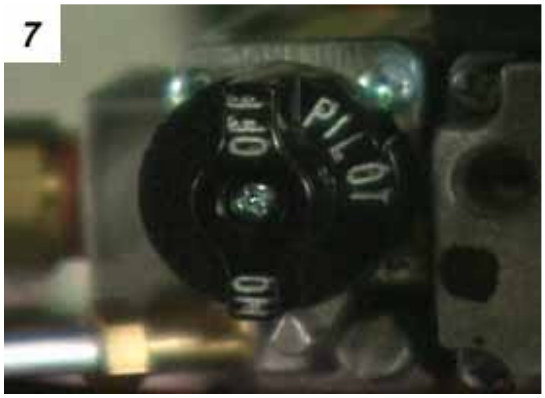

If the pilot light goes out, contact your nearest dealer for service. Remember to shut the gas supply valve off (picture #1). If it remains lit, press the valve knob in slightly and rotate counter-clockwise until the word "ON" is in the 6 o'clock position.

Finally, turn the unit's ON/OFF switch (or wall switch or remote control) to the "ON" position to start your fire. N.B If using wall switch or remote make sure the on/off switch shown above remains in the OFF position.

Enjoy your fireplace!

* If you do not see a red or black spark ignitor button, you do not have a manual ignition system. If power is actively supplied to your fireplace, simply turn the on/off